 
 
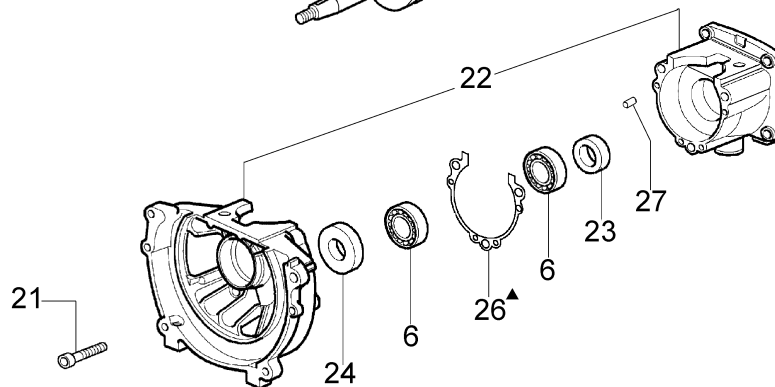 
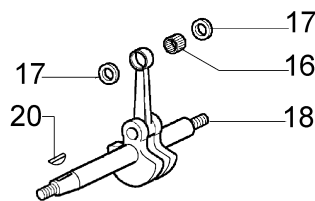 
 
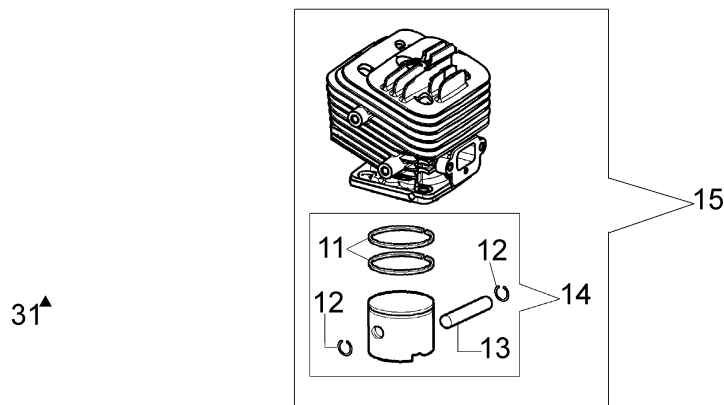 
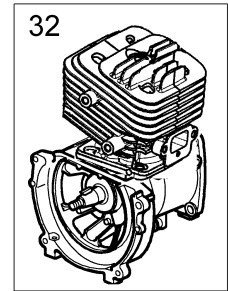 
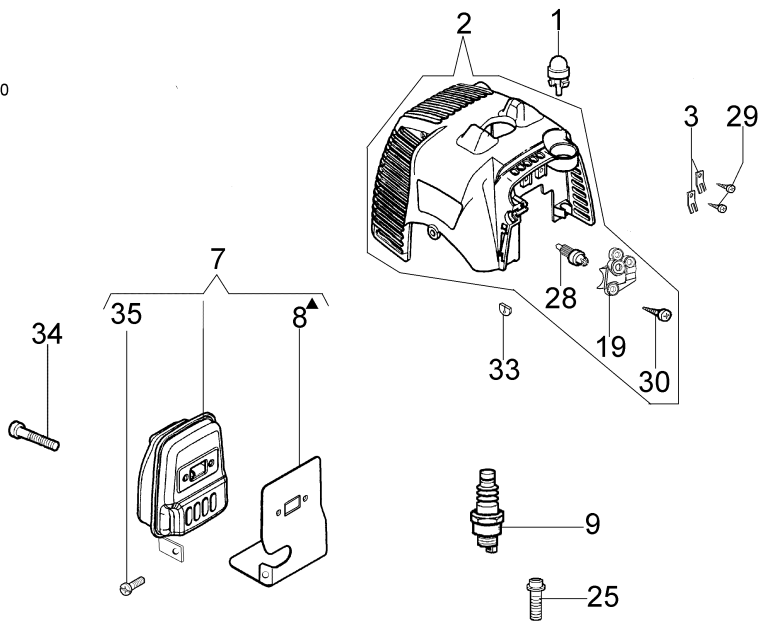 






Fino a 17/10/2010
 Until 17/10/2010
 Jusqu'a 17/10/2010
 Hasta 17/10/2010
 Bis zu 17/10/2010

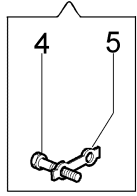





Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	2318817R	Air purge				
2	1	61280102AR	Cylinder cover				
3	1	4191069B	Plate				
4	2	3806014	Screw		17/10/2010		
5	1	61070055	Plate		17/10/2010		
6	2	3034009R	Bearing				
7	1	61280010CR	Muffler				
8	1	61280008DR	Gasket				
9	1	3055120	Spark plug				
10	1	61280005R	Gasket				
11	1	072700048R	Piston ring Ø34				
12	2	093000167	Ring				
13	1	072700045R	Piston pin				
14	1	61292031B	Piston assy Ø34				
15	1	61292032B	Complete cylinder				
16	1	072700046R	Bearing				
17	2	074000267AR	Spacer				
18	1	61280004R	Crankshaft				
19	1	61280100R	Stopper				
20	1	3028013R	Key				
21	3	3860096	Screw				
22	1	61280043BR	Crankcase assy				
23	1	3050038R	Seal ring				
24	1	3050039R	Seal ring				
25	4	3860095R	Screw				
26	1	61280009AR	Gasket				
27	3	61280044R	Plug				
28	1	61250249R	Adjust. pin				
29	3	3960087AR	Screw				
30	3	3960087AR	Screw				
31	1	61282025D	Gasket set				
32	1	61292033AR	Short block				
33	1	005000347A	Grommet				
34	2	4175162A	Screw	18/10/2010			
35	1	4175089A	Screw	SN 2169375273			BT3-086-10/09

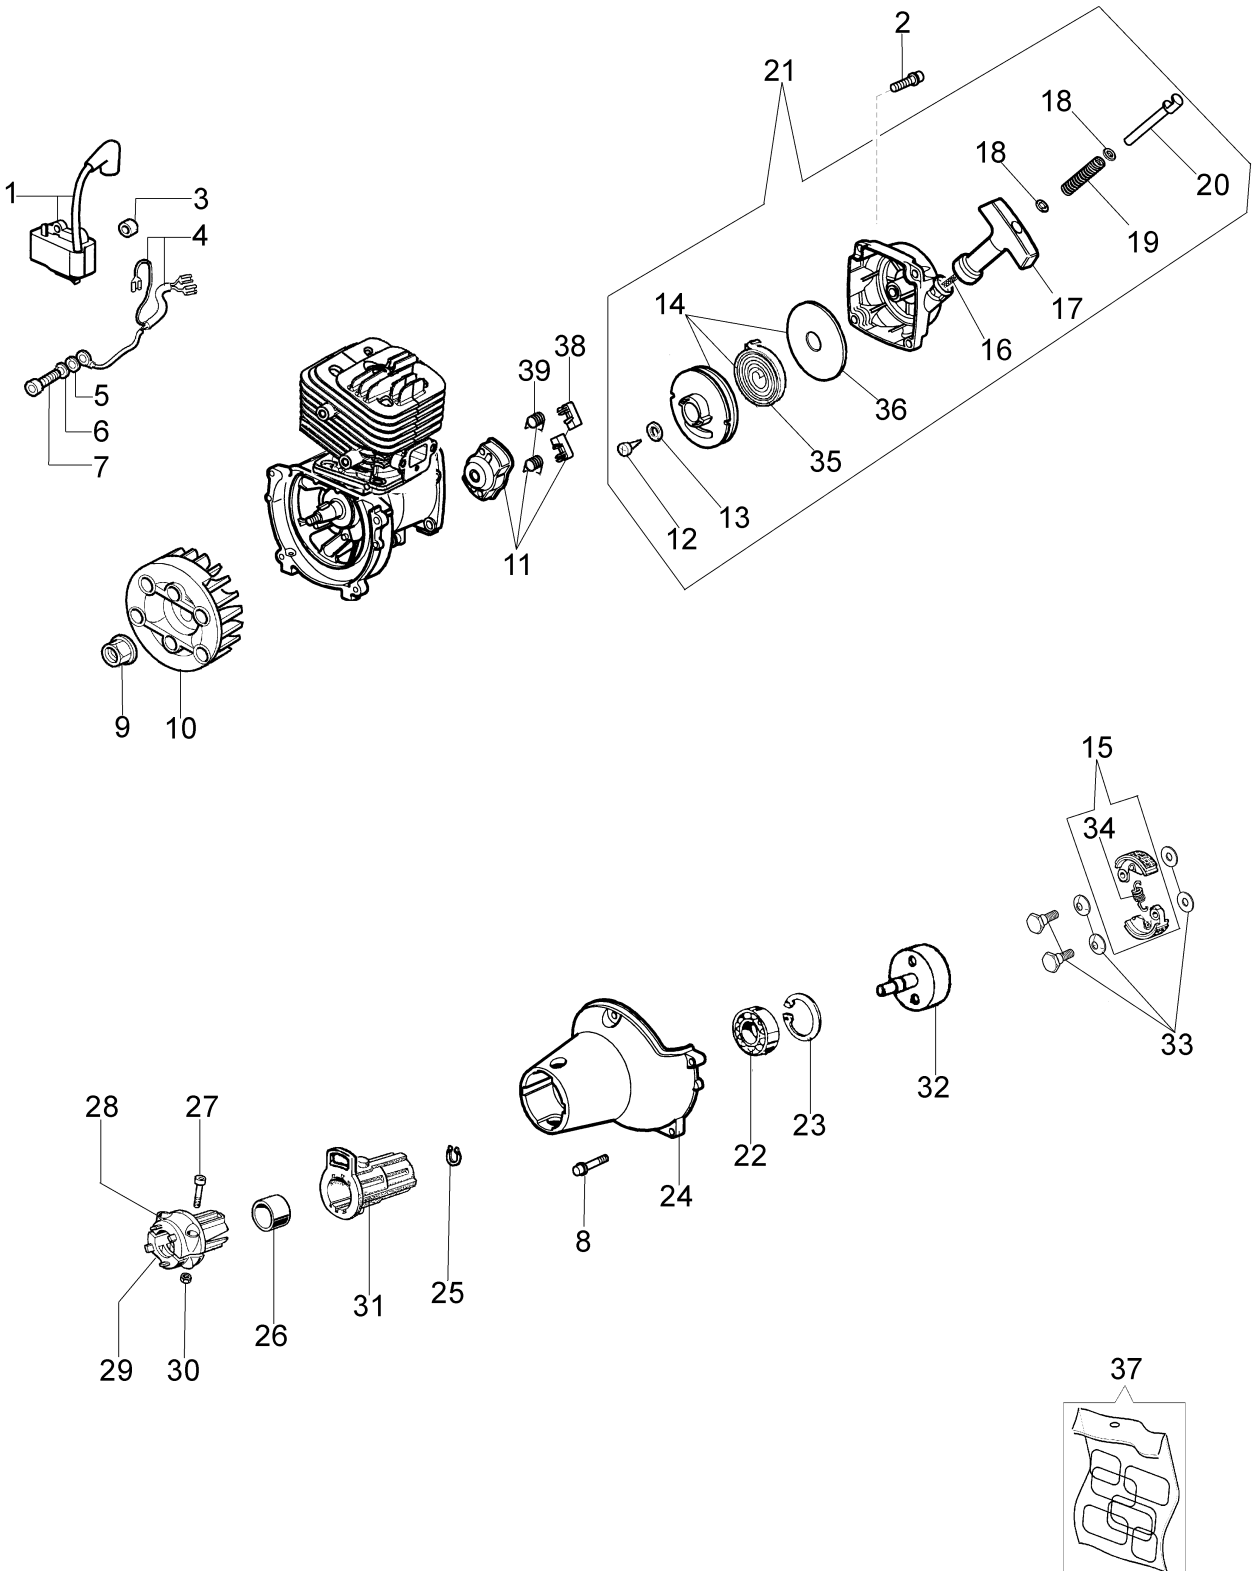


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	61220024AR	Ignition coil				
2	4	61052008R	Screw				
3	2	61170014	Spacer				
4	1	61170017R	Cable				
5	2	3916004R	Washer				
6	2	3819005R	Washer				
7	2	006000085	Screw				
8	4	3801013R	Screw				
9	1	3980012	Nut				
10	1	61280025R	Flywheel				
11	1	56560034R	Clutch driver				
12	1	3960070AR	Screw				
13	1	094600054	Washer				
14	1	61172004R	Complete pulley				
15	1	61070091AR	Clutch				
16	1	61070019AR	Starter rope				
17	1	56530018R	Starter handle				
18	1	56530021	Washer				
19	1	56530019	Spring				
20	1	56530020	Insert				
21	1	61170054AR	Starter assy				
22	1	3035023R	Bearing				
23	1	3025019	Ring				
24	1	61222012A	Starter case				
25	1	3024012	Ring				
26	1	4161364	Bushing				
27	2	3801016R	Screw				
28	1	61010021	Adaptor				
29	1	61010020	Adaptor				
30	2	3914003R	Nut				
31	1	4161428	Sleeve				
32	1	61070022DR	Clutch drum				
33	1	61170137C	Screw/washer kit				
34	1	61070090R	Spring				
35	1	61070036R	Spring				
36	1	61170173R	Washer				
37	1	61292052	Labels kit				
38	2	61070038	Pawl				
39	1	61070039R	Spring				

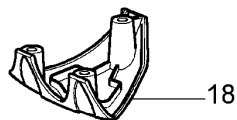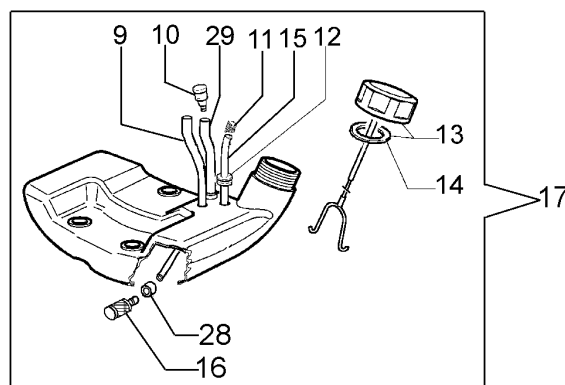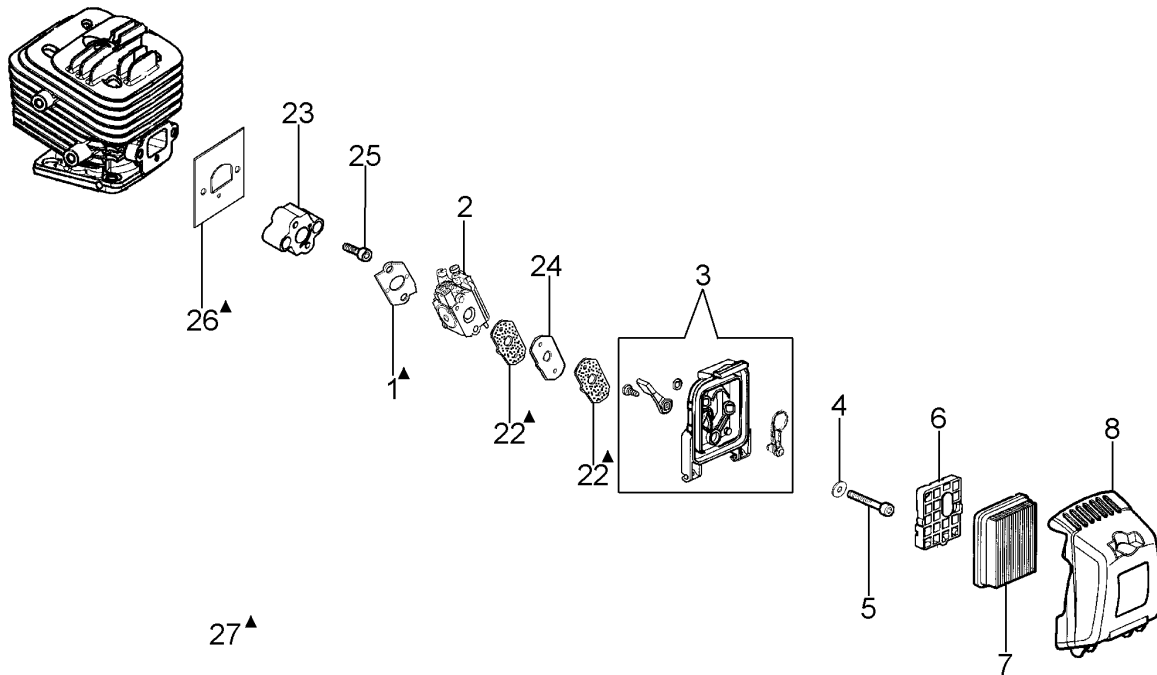    


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	072700077CR	Gasket				
2	1	2318705CR	Carburetor				
3	1	61280030R	Filter support				
4	2	3833073R	Washer				
5	2	4175163	Screw				
6	1	61170052A	Guard				
7	1	61170016R	Air filter				
8	1	61170040BR	Filter cover				
9	1	61280055R	Tube				
10	1	61070011AR	Breather valve				
11	1	4098377R	Band				
12	1	4161211R	Bush				
13	1	61070079R	Tank cap				
14	1	61070006R	Gasket				
15	1	61280056	Tube				
16	1	094600450R	Fuel filter				
17	1	61282030R	Tank				
18	1	61170041	Stand				
19	3	3918005	Washer				
20	3	3819006R	Grower				
21	3	3801013R	Screw				
22	1	61280059BR	Gasket				
23	1	074000130C	Insulator				
24	1	61290004R	Spacer				
25	2	3960069AR	Screw				
26	1	072700076B	Gasket				
27	1	61282025D	Gasket set				
28	1	61110162A	Bushing				
29	1	61070078	Tube				

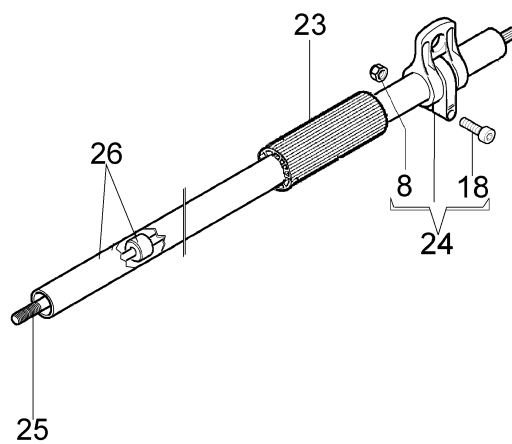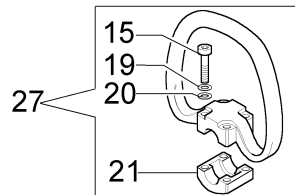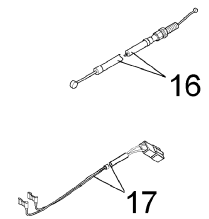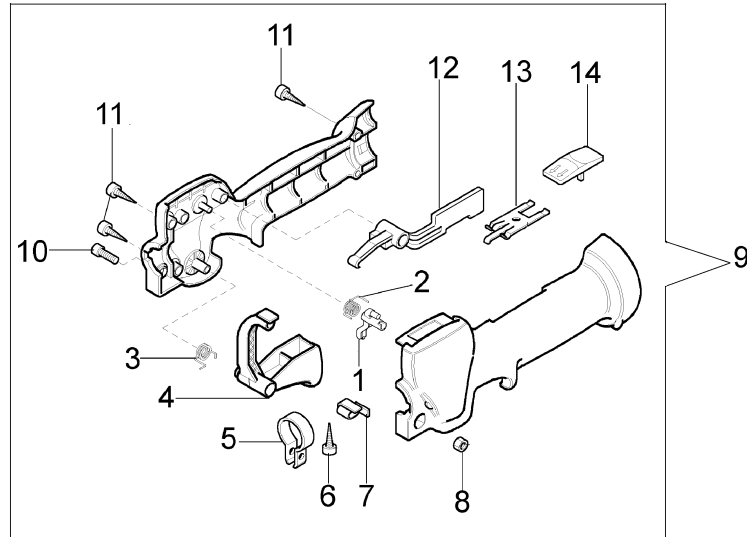    

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	61040052	Pawl				
2	1	61040057R	Spring				
3	1	61040056R	Spring				
4	1	61040049	Throttle lever				
5	1	61010019	Band				
6	1	3960061AR	Screw				
7	1	61040054	Plate				
8	2	3914003R	Nut				
9	1	61012006AR	Handle				
10	1	3801011	Screw				
11	3	3960067AR	Screw				
12	1	61040050AR	Lever				
13	1	61040053	Plate				
14	1	61040051	Slide control				
15	1	3801017R	Screw				
16	1	61280061AR	Throttle cable				
17	1	61280122R	Cable				
18	3	3801015	Screw				
19	1	3819006R	Grower				
20	1	3918010R	Washer				
21	1	61010024R	Clamp				
23	1	4160262B	Knob				
24	1	4161619R	Band				
25	1	61290040R	Drive shaft				
26	1	61280069R	Tube Ø26				
27	1	4161293B	Handle				

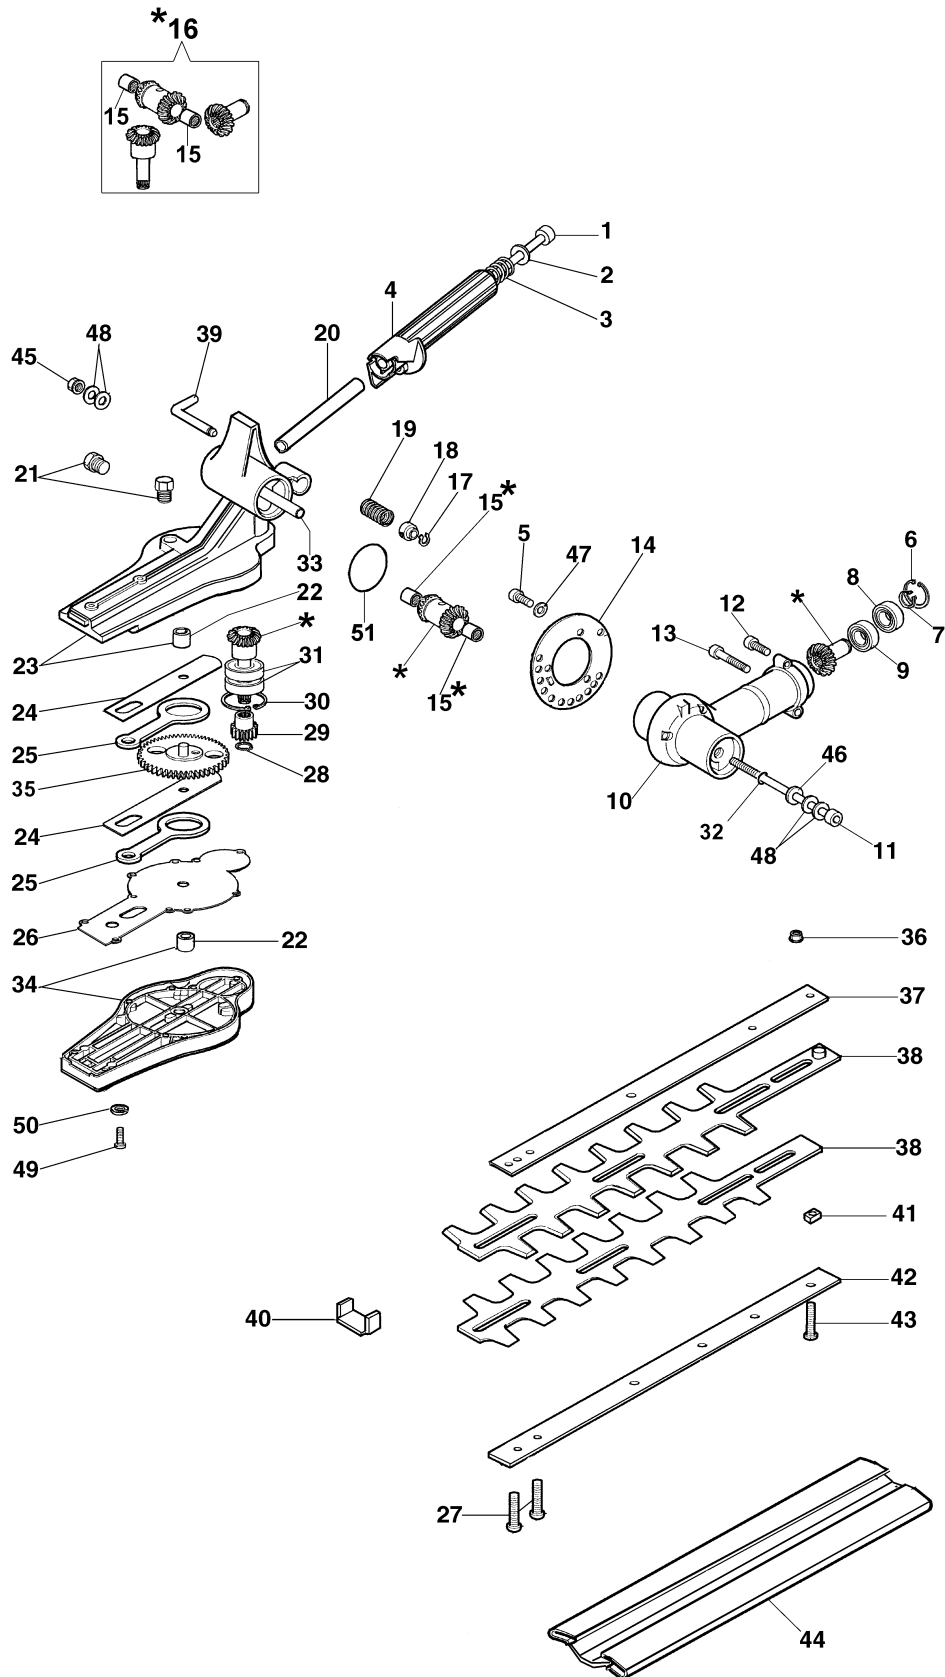 

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	3901061	Screw				
2	1	3918007	Washer				
3	1	58050016	Spring				
4	1	58050018	Handle				
5	3	3901062R	Screw				
6	1	3025018R	Ring				
7	1	3024010R	Ring				
8	1	3035230	Bearing				
9	1	3034008	Bearing				
10	1	58050003A	Half case				
11	1	3901060	Screw				
12	1	3901008R	Screw				
13	1	3901016	Screw				
14	1	58050005	Disk				
15	2	3037007	Bearing				
16	1	58050057A	Bevel gear set				
17	1	3024006	Snap ring				
18	1	58050014	Bushing				
19	1	58050015	Spring				
20	1	58050017	Pipe				
21	1	61040071R	Cap				
22	2	3067006	Bushing				
23	1	58052008A	Gear housing				
24	2	58040057	Plate				
25	2	58040227AR	Connecting rod				
26	1	58050004	Gasket				
27	2	3801057	Screw				
28	1	3024008	Snap ring				
29	1	58050011	Sprocket				
30	1	3025020	Snap ring				
31	2	3035009	Bearing				
32	1	008200282	O-ring				
33	1	58050012	Pipe				
34	1	58050002	Cover				
35	1	58040101	Sprocket				
36	4	3980014R	Nut				
37	1	58050022	Support				
38	2	58050021R	Blade				
39	1	58050013A	Pin				
40	1	58040077A	Gasket				
41	6	58040051	Spacer				
42	1	58050023	Support				
43	4	3979021	Screw				
44	1	58050024	Guard				
45	1	3914003R	Nut				
46	1	3918005	Washer				
47	3	3819006R	Grower				
48	4	3057005	Washer				
49	7	3960074	Screw				
50	7	3819005R	Washer				
51	1	099900090	O-ring				

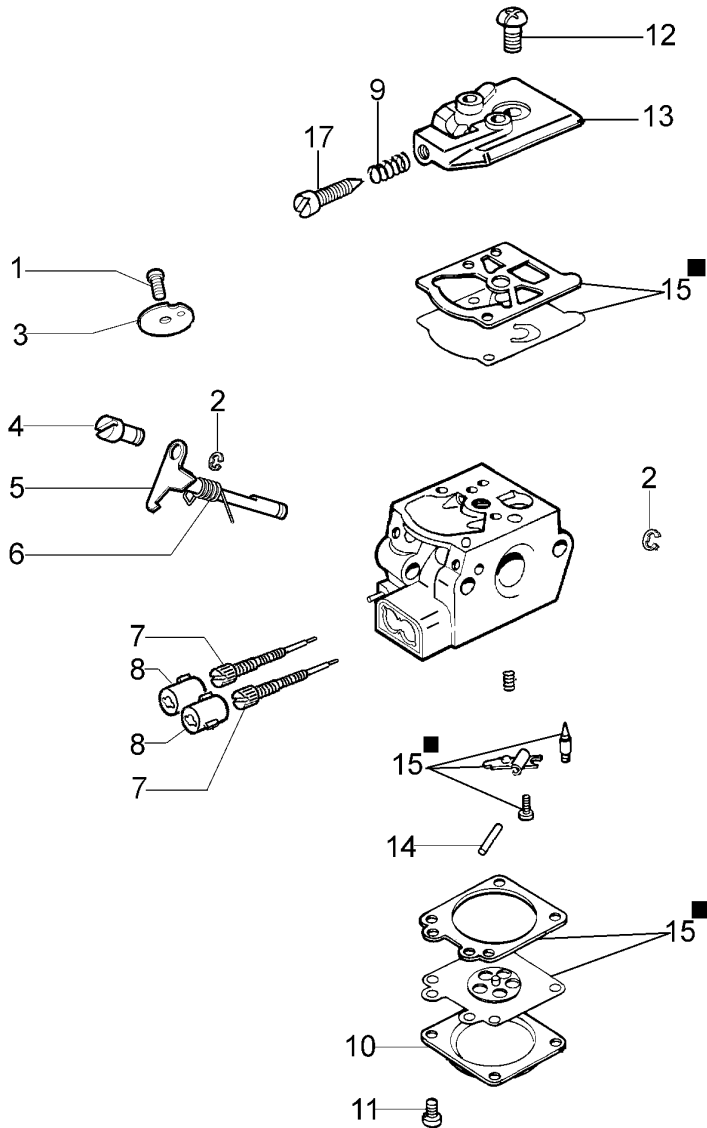 

15 ■ KIT RIPARAZIONE
REPAIR KIT

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	50010141	Screw				
2	2	095000164	Ring				
3	1	375100078	Shutter				
4	1	2318211	Pin				
5	1	2318737	Shaft				
6	1	072700347	Spring				
7	1	2318631	Adjust. screw				
8	2	2318687	Caps-lock				
9	1	094600148	Spring				
10	1	2318191	Cover				
11	4	035000162	Screw				
12	1	003300202	Screw				
13	1	50050107	Cover				
14	1	003300201	Spindle				
15	1	2318671	Repair kit				
17	1	074000240	Adjust. screw				